EasyCoding User Manual

Table of contests

1. Software operating system	2
2. Software download and installation	2
2.1 Software download	2
2.2 Software installation	2
3. Product instruction	6
3.1 Parts	6
3.2 EasyCoding Function	6
4. Connection mode	9
4.1 The position of vehicle diagnosis socket	9
4.2 Connection mode of ENET	10
5. Software operation manual	10
5.1 Software operating environment	10
5.2 Vehicle condition	10
5.3 Internet condition	11
6. Operating software	11
6.1 Diagnostic function	12
6.2 DTC	13
6.3 Customization	13
6.3.1 Common mode	14
6.3.2 Expert Mode	16
7. Options	
8. Registration	
9. Upgrading	
10. Help	19
11. Service	19
11.1 Guarantee clause	19
11.0 Feedback	10

- Requirements for hardware: laptop, PC, PAD. Space of system disk is no less than 5G, and RAM is no less than 2G.
- Operating system: Supporting WINDOWS XP SP3, WIONDOWS 7 and WIONDOWS 8, but not WINDOWS RT.
- Requirements for internet: The software needs to be upgraded online, please make sure your internet is connected.



2. Software download and installation


2.1 Software download

Log in http://www.euseauto.com and download EasyCoding_setup_V1.0 installation package.


2.2 Software installation

Decompress EasyCoding_setup_V1.0 package and release the folder *setup.exe* or you can find *setup.exe* from manufacturer's Sandisk. The following is an example:

<Euse.Fundetail.V1.1>

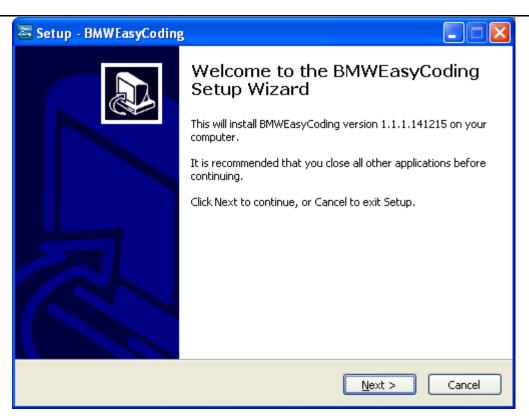

Press [Next]

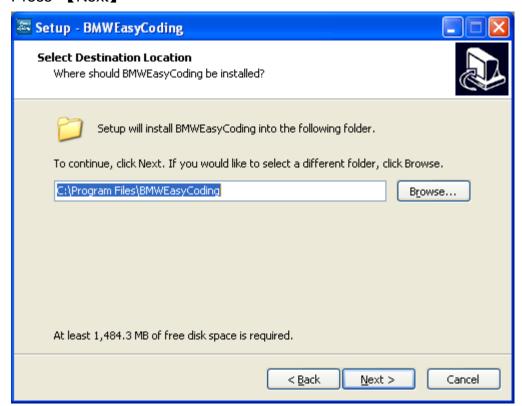


Press [Next]




Press [Next]


<Euse.Fundetail.V1.1>

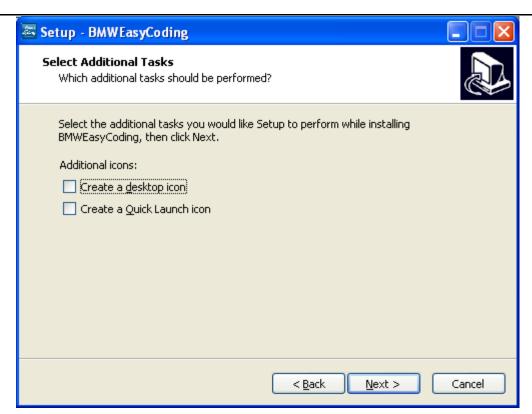

Choose "Create a desktop icon" and then press 【Next】

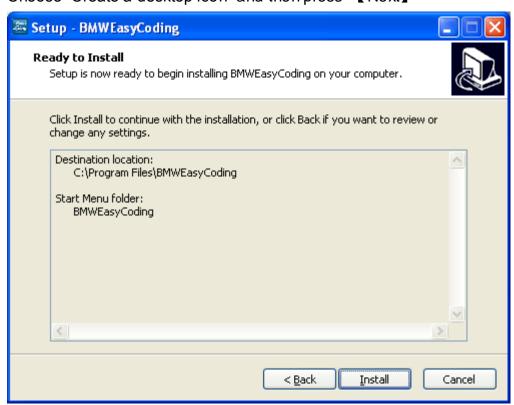

Press [Install]

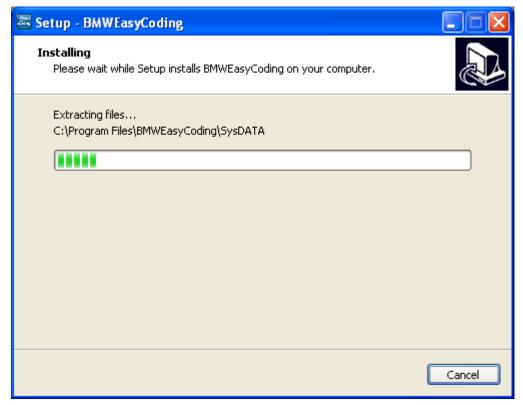



Press [Finish] to operate "EasyCoding"

If Superdog is not inserted, the following information will pop up.



If Superdog is inserted, you will enter software application interface.





3. Product instruction

3.1 Parts

Number	Picture	Name	Function
1	BAT WORLPIST INPUT DC-12V (C Less Con.	ENET Contactor	Connect OBD diagnosis socket
2		Cable	Connect PC and ENET Contact
3	Sunjek	USB Flash disk	EasyCoding installation software
4		Superdog	Superdog must be inserted in USB interface of your PC when applying EasyCoding

3.2 EasyCoding Function

EasyCoding is a newly developed device for reading BMW and Rolls-Royce fault codes and making vehicle personalized settings. Below is a list of car models and model years that it supports:

Dev.			Dev.		
Platform	Car models	Year of made	Platform	Car models	Year of made
F01	BMW 7 Series Sedan	Oct. 2010 upwards	F31	BMW 3 Series Wagon	Oct. 2012 upwards
F02	BMW 7 Series Limo	Apr. 2009 upwards	F32	BMW 3 Series Coupe	Dec. 2012 upwards
F03	BMW 7 Series High Security	Nov. 2011 upwards	F33	BMW 3 Series Convertible	May 2013 upwards
F04	BMW 7 Series Hybrid	Apr. 2012 upwards	F34	BMW 3 Series Gran Turismo	Mar. 2013 upwards
F06	BMW 6 Series Gran Coupe	Jan. 2013 upwards	F35	BMW 3 Series Gran Coupe (China Limo)	Aug. 2012 upwards
F07	BMW 5 Series Gran Turismo	Dec. 2012 upwards	F36	BMW 4 Series Coupe	Sep. 2013 upwards
F10	BMW 5 Series Sedan	Jun. 2009 upwards	F55	MINI Cooper	Feb. 2014 upwards
F11	BMW 5 Series Wagon	Apr. 2011 upwards	F56	MINI Cooper	Jan. 2014 upwards
F12	BMW 6 Series Convertible	May 2012 upwards	F80	M3 4-Door Sedan	Apr. 2014 upwards
F13	BMW 6 Series Coupe	Mar. 2012 upwards	F82	M3 2-Door Coupe	May 2014 upwards
F15	BMW X5 M Sport	May 2014 upwards	F83	M3 Convertible	Apr. 2014 upwards
F16	BMW X6 Sports Activity Croup	Mar. 2014 upwards	F85	BMW X5 M SUV	Mar. 2014 upwards
F18	BMW 5 Series Sedan (China Limo)	Oct. 2010 upwards	F86	BMW X6 M SUV	Feb. 2014 upwards
F20	BMW 1 Series Luxury Sedan	Jan. 2013 upwards	RR1	Rolls-Royce luxury sedan series II	Nov. 2002 upwards
F21	BMW 1 Series Sedan	Oct. 2012 upwards	RR2	Rolls-Royce Corniche Convertible II	Jun. 2006 upwards
F22	BMW 1 Series Sedan	Jan. 2014 upwards	RR3	Rolls-Royce luxury sport cars series II	Aug. 2011 upwards
F23	BMW 1 Series Convertible	Apr. 2014 upwards	RR4	Rolls-Royce luxury sedan	May 2015 upwards
F25	X3 SUV	Jan. 2011 upwards	RR5	Rolls-Royce Ghost	Feb. 2014 upwards
F26	X4 SUV	Jan. 2014 upwards	RR6	Rolls-Royce Convertible	Feb. 2014 upwards

Nane: EasyCoding
Component: User Manual
Document: Product Document

euseauto@163.com
Revision: EasyCoding. V1.1
<euse, fundetail,="" v1.1=""></euse,>

Dev.			Dev.		
Platform	Car models	Year of made	Platform	Car models	Year of made
F30	BMW 3 Series Gran Coupe	Sep. 2011 upwards			

Table 1. EasyCoding car model and model year list

Personalization functions please see Table 2. Personalization function list.

Note: To check out if some functions are available on specific cars, please look up that car's settings according to the table below. These functions vary from vehicle to vehicle. Because of different hardware configuration, some functions may not available on certain cars.

#	System	Function			
		Add Select Sound Effects Of Lock/Unlock In I-drive			
		Operate Navigation Menu And Watch DVD During Driving			
		Enable Efficient Dynamics Sport CID (Added Sport Displays The Vehicle Info Screen			
		(Power & Torque Meters)).			
		Disable iDrive Legal Disclaimer During iDrive Startup			
		Select Sports Mode In I-drive			
1	HU	Turn On Gasoline Station Alert In Navigator			
'	110	Allow PDC(Park Distance Control) To Indicate Park Distance			
		Disable Daytime Running Lamps			
		Convert kilometers To Miles			
		Increase The FM band			
		Disable Handbrake To Play Videos			
		Disable Reversing Camera Warning Window			
		Video Playing With USB Are Available In 2013 NTB			
2	ACSM	Set Seat Belt Alarm To Last 10 Seconds			
	BDC	Allow Car Windows To Roll Up Without Being Disturbed By Door Openings			
3		Activate/Deactivate Headlight Washer			
		Set Car's Auto Start/Stop To Start In The Last Used Setting (e.g. Off) When The Engine Is			
		Started			
		Central Control Unlock Automatically When Engine Is Off			
4	CAS	Shorten Time To Roll Up Or Down Car Windows			
		Shorten The Time To Fold Down Rearview Mirrors			
		Voice Recognition			
	Combox	Play Videos			
5		Add CIC stored addresses/messages from 25 to 50			
		Microphone Settings			
		Change and Synchronize Incoming Call Ringtones On Bluetooth Device			
6	DWA8	Set Lock Alarm Sound To The Maximum			
	FEM .	Allow Car Windows To Roll Up Without Being Disturbed By Door Openings			
7		Activate/Deactivate Headlight Washer			
'		Set Car's Auto Start/Stop To Start In The Last Used Setting (e.g. Off) When The Engine Is			
		Started			
8	FKA	AC Records Last Engine-off Statues			

euseauto@163.com Revision: EasyCoding.V1.1 <Euse.Fundetail.V1.1>

#	System	Function		
	FRM	Allow Car Windows To Roll Up Without Being Disturbed By Door Openings		
9		Auto Control Of High Beams		
		Extend Foot To Open Rear Cover		
10	FZD	Set Lock Alarm Sound To The Maximum		
4.4	AC Records Last Engine-off Statues			
11	IHKA	AC Air Circulation Records its Engine-off Statues		
12	TCU	Microphone Settings		
		Allow Car Windows To Roll Up Without Being Disturbed By Door Openings		
		Activate/Deactivate Headlight Washer		
13	JBBFE	Wiper Resets Automatically		
		Disable Front Camera At Maximum Distance		
		Disable Back Camera At Maximum Distance		
14	KOMBI	Display Digital Vehicle Speed		
		Disable Front Camera At Maximum Distance		
		Disable Back Camera At Maximum Distance		
15	PMA	Disable Front Camera At Maximum Speed		
		Disable Back Camera At Maximum Speed		
		Add Select Sound Effects Of Lock/Unlock In I-drive		
16	BADIO	Operate Navigation Menu And Watch DVD During Driving		
10	RADIO	Disable Daytime Running Lamps		
		Increase The FM band		
		Add Select Sound Effects Of Lock/Unlock In I-drive		
		Operate Navigation Menu And Watch DVD During Driving		
		Enable Efficient Dynamics Sport CID (Added Sport Displays The Vehicle Info Screen		
		(Power & Torque Meters)).		
	Select Spor Turn On Gas Allow PDC(P Disable Dayt Convert kilon Increase The	Disable iDrive Legal Disclaimer During iDrive Startup		
17		Select Sports Mode In I-drive		
		Turn On Gasoline Station Alert In Navigator		
		Allow PDC(Park Distance Control) To Indicate Park Distance		
		Disable Daytime Running Lamps		
		Convert kilometers To Miles		
		Increase The FM band		
		Disable Handbrake To Play Videos		
		Voice Recognition 2		
18	ULF	Select Bluetooth Phone Ringtone		
		Change and Synchronize Incoming Call Ringtones On Bluetooth Device		

Table 2. Personalization function list

4. Connection mode


4.1 The position of vehicle diagnosis socket

The OBD diagnosis socket is usually below instrument panel in the driving side. For example, the diagnosis socket of BMW 1 series is situated at driver door frame, and the cover is marked "OBD". When uncovered, you can see OBD diagnosis socket.



Picture1. OBD diagnosis socket of BMW 1 series


The OBD diagnosis socket of BMW 3 series, BMW 5 series and BMW 7 series is below instrument panel in the driving side.

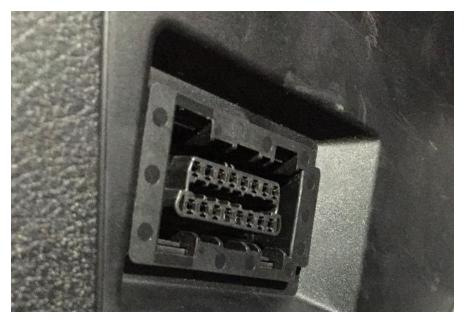

Picture2. OBD diagnosis socket of BMW 3 series



Picture3. OBD diagnosis socket of BMW 5 series

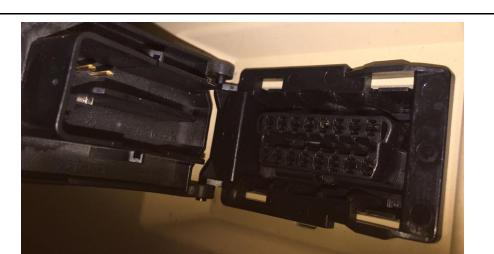

Picture4. OBD diagnosis socket of BMW 7 series

4.2 Connection mode of ENET

Plug ENET connecter into the OBD diagnostic port of the car. The indicating light on the connector will turn on, indicating that the OBD port is providing a stable power supply, as shown in Picture 5. If the light is not on, please check if there is a bad ENET connection. Then connect the networking cable to the ENET connector. Once the connection is built, the EasyCoding software is ready to use.



Picture5. Connection mode of ENET

5. Software operation manual

5.1 Software operating environment


System requirement: WINDOWS operating system, Windows XP SP3, Windows 7, Windows 8.

5.2 Vehicle condition

Make sure the vehicle battery is in good condition. The voltage is above 12V, and there is electricity loss. Turn on ignition switch but do not start the vehicle and turn off other electric appliances on the car.

5.3 Internet condition

Please check the Cable Network Setting in your computer and configure your computer to obtain an IP address automatically instead of using an assigned IP address.

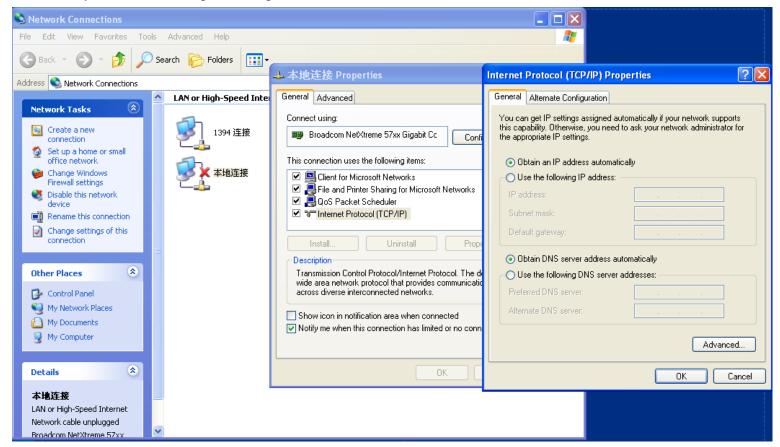

Picture6

6. Operating software

Insert Superdog to the USB interface of your computer. It's unnecessary to install any drive. Double click EasyCoding icon on desktop to operate the software.



Picture7



6.1 Diagnostic function


When network status icon on the lower right corner of computer stops circling an exclamation mark appears, you can click the software diagnostic icon.



Picture 8

The software reads vehicle VIN code automatically and displays vehicle information. If the vehicle information is not shown, you need to contact the supplier for the latest vehicle data.

Press [Page Down] to display full vehicle information; Press [Back] can return to previous menu; Press [OK] to entering into Sub-menu.

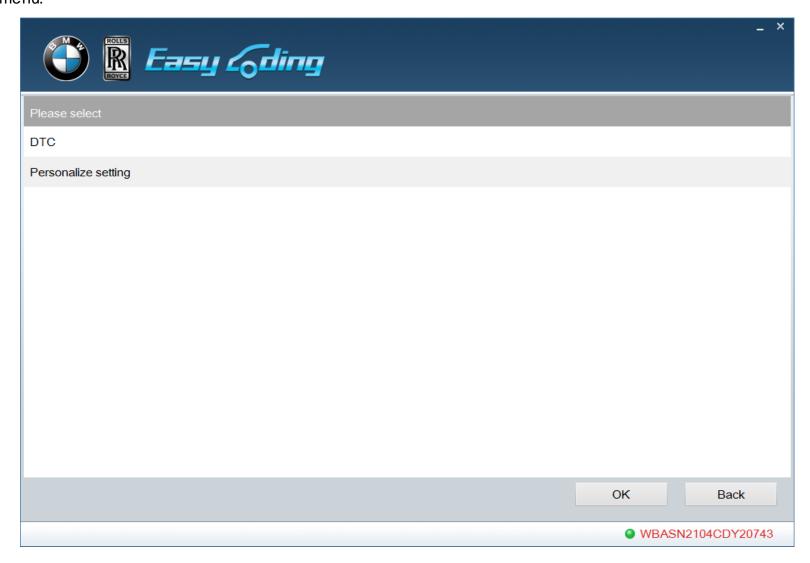

euseauto@163.com Revision:EasyCoding.V1.1 <Euse.Fundetail.V1.1>

Picture9

Two major diagnostic functions: "DTC" and "Customization".

6.2 DTC

The function of diagnosing DTC can scan all DTCs existing in electric system. Please confirm there is no DTC stored before customization. Historical DTCs and sporadic DTCs can be cleared by clearing function, but permanent DTCs indicate DTCs exist in vehicle and can't be cleared. Please confirm whether further maintenance is needed.

After customization, you can check whether there is DTC information stored in the car. If there is new DTC information, then the customization is not suitable this vehicle. Please restore the modified customization.

Click DTC menu as follows:




Picture10

Click [Delete] can clear all DTCs. After clearance, click [Back] and operate DTC clearing function again to confirm whether DTC information exists or not.

6.3 Customization

Choose customization menu and click [OK] to entering into customization interface.

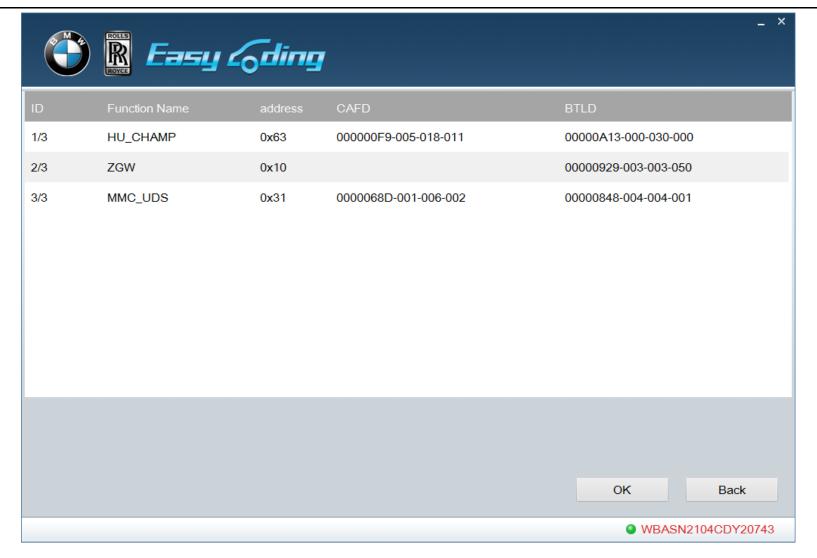


Picture11

This interface is an example of a car which displays all systems.

Note: sometimes the lists may not be complete because of radio communication mechanism. When this happened, please return and reenter into the interface.

Choose a system. Take HU as an example. Click [OK] to get into mode selection menu.

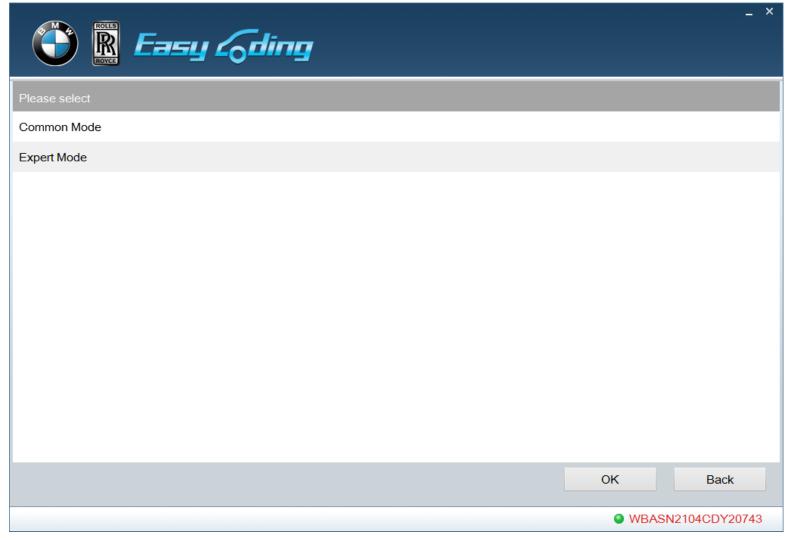


Picture12

6.3.1 Common mode

QUSE ®

Click "Common Mode" and the functions that can be modified in the system are shown. You can refer to chart 2: customization chart to select common functions for relevant system according to function lists. Different vehicle models may correspond to different systems.

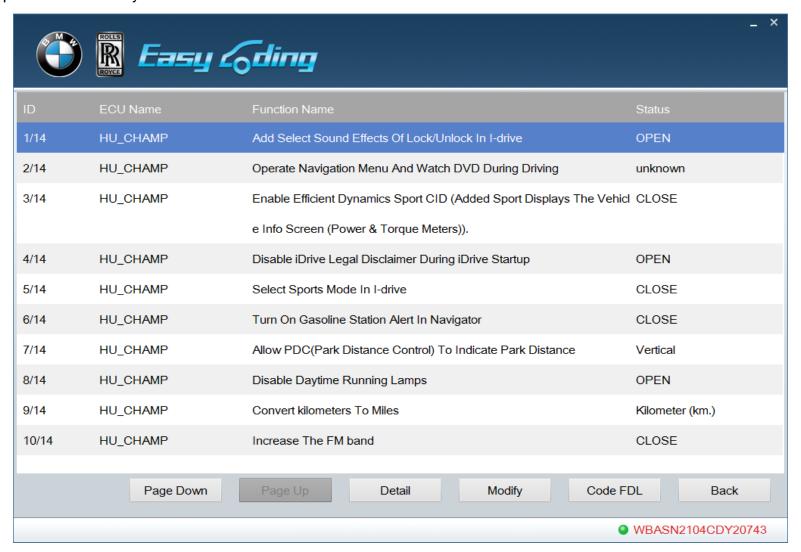

Picture13

Take "Select sound effects of Lock/Unlock in I-drive" as an example to introduce modifying operation in common mode. Click "Select sound effects of Lock/Unlock in I-drive", and the current state is "close". Click [Modify] and this function will show "open". Then click [Code FDL], as shown in picture 14.



Picture 14

euseauto@163.com Revision:EasyCoding.V1.1

<Euse.Fundetail.V1.1>

When code is set, common function is modified successful. But it still needs to be set in "idrive". The process is shown as picture 15 and picture 16.



Picture 15



Picture 16

Another option in "Door Lock" is added, that is "Sound Effects of Lock/Unlock". Check this option and you can test the sound effects of lock/unlock. If the sound is too small, you can modify the volume in common mode.

6.3.2 Expert Mode

Some functions may require system parameters to be modified or sometimes you may not find the functions you want, in "Common Mode", then you will need "Expert Mode". There are posts of opening expert functions in BMW forums. You can modify parameters referring to those posts and modify the functions you want in "Expert Mode". System name, parameter and reflash hidden code table are the same, but we haven't tested yet.

Click "Expert Mode" to entering into parameter searching interface. The process is shown as picture 17.




Picture 17

Please input the desired parameter in input box.




Picture 18

Find the desired parameter, and click the parameter line with left mouse button. As shown in picture 19, there are 3 options, choose the desired state or input customized value.

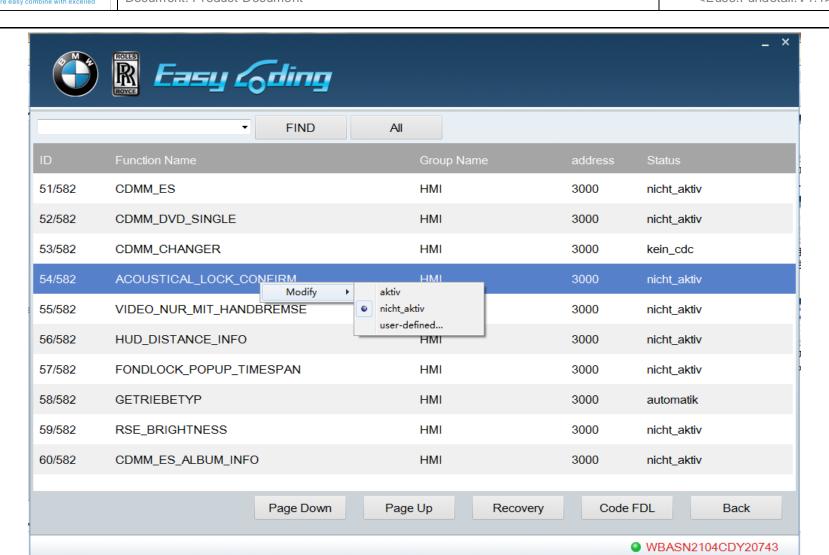

Picture 19

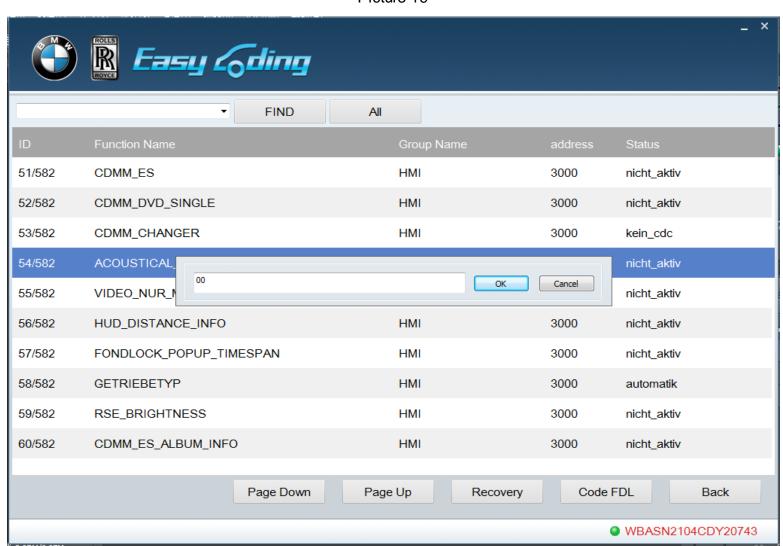

Picture 20

After change setting, click "Code FDL"

Note: "Custom" default uses the hexadecimal format, for example, decimal 1 equals to hexadecimal 0 x01, you can enter 0 x01 or 01; decimal 10 equals to hexadecimal 0x0A, you can enter 0x0A or 0A.

Expert Mode also provides "Recovery" function. If any fault code is generated when modifying certain system parameter and the code cannot be erased, that indicates this function is not available for your car. By this time you need to use recover function, it can restore your vehicle the raw data. Generally, choose the earliest system parameter to recover, see Picture 21.



Picture 21

7. Options

This function is used to display software version and to select languages.

8. Registration

Registration is not needed for this version.

9. Upgrading

Online upgrading is not supported at present. Please pay attention to upgrading information on www.ucandas.com. There are at least 3 upgrades each year, including vehicle model database, code setting database, new common function settings and software optimizing.

10. Help

Click "Help" to entering into help interface and to guiding you operate the software correctly.

11. Service

11.1 Guarantee clause

One-year free replacement for the hardware of EasyCoding and two-year free upgrade for EasyCoding.

11.2 Feedback

You can send any question or advice to the email, euseauto@g163.com.