


V.2.ind1.ESL Adapter

Step1: Load EIS IFR DATA

ステップ 1 : EIS IFR データをロードする

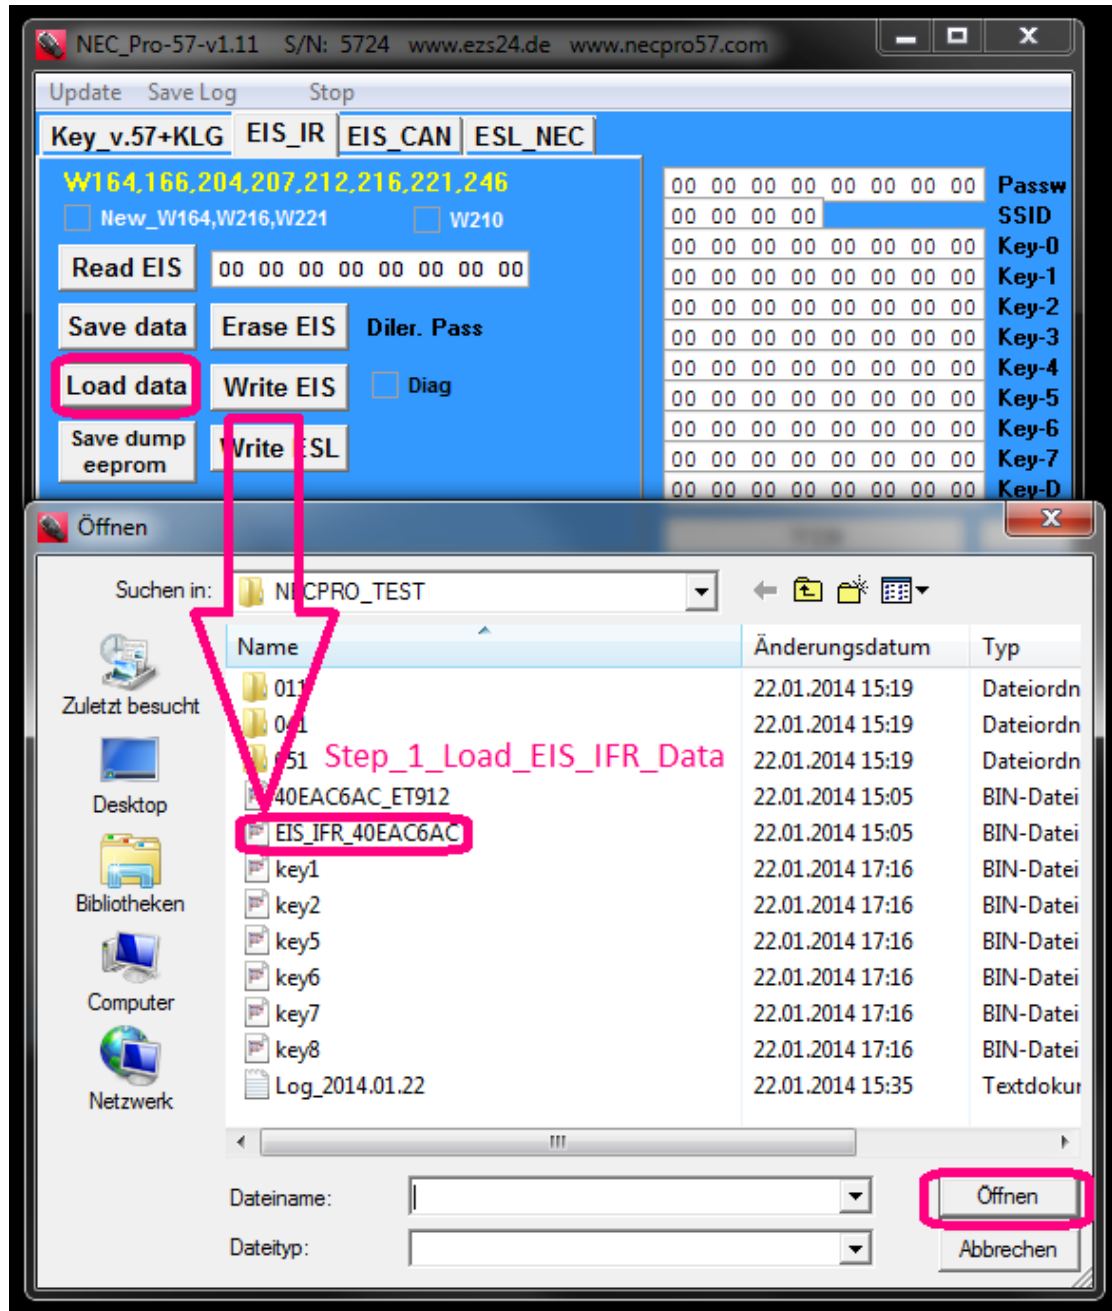

Step1: Write ESL

ステップ 2 : ESL を書き込む

NEC\_Pro-57-v1.11 S/N: 5724 www.ezs24.de www.necpro57.com

Update Save Log Stop

Key\_v.57+KLG EIS\_IR EIS\_CAN ESL\_NEC

**For ESL NEC Only**

W204,X204,W212  W211,W906

00 00 00 00 00 00 00 00 Dill. Pass.

Read Erase

Save **Write** Load

07 9D F3 B3 DD 1C 96 CB	Passw
40 EA C6 AC	S: ID
1A 6D D9 DE 5D 2E EE 26	Key-0
32 B4 82 88 7B 1D 16 E4	Key-1
6B 43 A7 E3 5B C9 9A 80	Key-2
31 88 B2 D0 B8 16 7D F0	Key-3
2E 1E EE BD EF 53 8A 97	Key-4
66 FC 76 1D 22 75 AE FD	Key-5
29 10 AD A7 BE 1C E5 71	Key-6
28 6D 3F 27 D8 18 EE FE	Key-7
EE DA 61 0D 5F 74 60 CE	Key-D

The file "EIS\_IR\_0EAC6AC.bin" is loaded  
OK!!!

Step\_2\_Write\_ESL

Check Key Password and Key Hash