

X-100+ TOYOTA V18.40

**Remote**

Type 1

Program remote

Type 2

Program remote

Erase remote

**Immobiliser**

Type 1

Add a key

Erase keys

Reset immobiliser

Replace engine ECU

Type 2 (with G)

Add a key

Erase keys

Replace immobiliser

Replace engine ECU

**Smart key system**

Type 1

Program smart keys

Erase smart keys

Reset smart key ECU

Reset smart key ECU

Program smart key after resetting

Program ECU

Program ID box with steering lock

Remote engine start

Type 2 (12 crown)

Program smart keys

Program remote

Reset immobiliser